

Screw-on levels

for mounting with screws

SPECIFICATION

Sensitivity

- **6**: Angle minutes, bubble move by 2 mm
- **50**: Angle minutes, bubble move by 2 mm

Types

- Type **AV**: aligned, mounting from the front side (not adjustable)
- Type **JV**: adjustable, mounting from the front side

Housing

Aluminum
anodized, natural color **ALN**
anodized, black **ALS**

Spirit level element
Glass body

Filling
green-transparent **G**

Casting compound
mineral-based



INFORMATION




Screw-on levels GN 2283 are used to check the horizontal position of jigs, machines, devices, appliances and instruments.

The spirit levels of type AV are aligned in relation to the reference surface so that the bubble is centered in the middle of the marking lines once the horizontal position of the contact surface is reached. The spirit levels of type JV are aligned during installation using the fastening holes.


An alignment guide on the bottom serves as a pivot point. With careful tightening, it is possible to achieve an alignment that places the bubble between the middle marking lines.

ON REQUEST

- Filling, colorless-transparent
- Other sensitivities

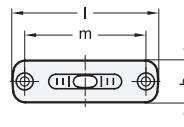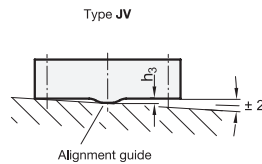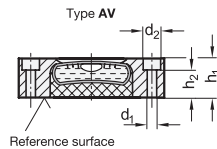

Application example

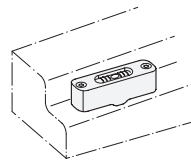

GN 2283-AV

Description	l	b	d1	d2	h1	h2	m	△
GN 2283-ALN-54-G-6-AV	54	15.5	3.4	6.3	14.5	11.3	45	13
GN 2283-ALS-54-G-6-AV	54	15.5	3.4	6.3	14.5	11.3	45	13
GN 2283-ALN-54-G-50-AV	54	15.5	3.4	6.3	14.5	11.3	45	13
GN 2283-ALS-54-G-50-AV	54	15.5	3.4	6.3	14.5	11.3	45	13

GN 2283-JV

Description	l	b	d1	d2	h1	h2	h3	m	△
GN 2283-ALN-54-G-6-JV	54	15.5	3.4	6.3	14.5	11.3	1	45	13
GN 2283-ALS-54-G-6-JV	54	15.5	3.4	6.3	14.5	11.3	1	45	13
GN 2283-ALN-54-G-50-JV	54	15.5	3.4	6.3	14.5	11.3	1	45	13
GN 2283-ALS-54-G-50-JV	54	15.5	3.4	6.3	14.5	11.3	1	45	13